

# zūmo™ 500/550



the personal motorcycle navigator

© 2006–2007 Garmin Ltd. or its subsidiaries  
 Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. zūmo™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.  
 The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license.  
 For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at [www.garmin.com](http://www.garmin.com).

Part Number 190-00697-01 Rev. C  
 March 2007 Printed in Taiwan



## Important Information

**WARNING:** This product contains a lithium-ion battery. See the *Important Safety and Product Information* guide in the product box for important battery safety information.

**WARNING:** When your zūmo is not in the motorcycle mount, use the weather cap to prevent damage to the connector.

**CAUTION:** To prevent damage to the touch screen, do not place sharp objects in the carrying case pocket.

**TIP:** Fold and keep this guide in your carrying case pocket.

## Specifications

Water resistance: IPX7 waterproof (submersible in 1 meter of water for up to 30 minutes)

Power: Vehicle power cable, AC cable


Battery: Rechargeable, replaceable lithium-ion battery.

Battery life: Fully charged, up to 4 hours

For more information, see the owner's manual on disk. See the *Important Safety and Product Information* guide in the product box for product warnings and important information.

## Looking at Your zūmo

- A** Power button
- B** Zoom in, raise volume, or increase brightness.
- C** Zoom out, lower volume, or decrease brightness.
- D** Page button—scroll through the Map, Compass, Trip Information, Media Player, and Phone Menu pages. Press and hold to adjust brightness.
- E** Speak button—press to adjust volume level. Press and hold to announce voice directions.

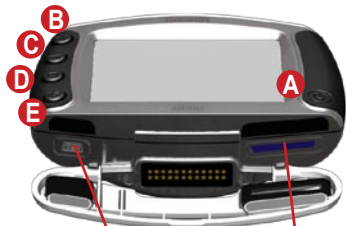

Mini-USB port for AC cable, USB Mass Storage mode, and updating software  
 SD card slot

## Resetting Your zūmo


If your unit freezes up, press and hold the **Power** button and press **+**.

## Configuring Your zūmo

To turn on your zūmo, press and hold the **Power** button. Follow the on-screen instructions.

## Acquiring Satellites

Go outdoors to an open area, away from tall buildings and trees. Turn on the zūmo. Acquiring satellite signals may take a few minutes.

 bars indicate GPS satellite strength. When the bars are green, your zūmo has acquired satellite signals, and you can start navigating.

## Charging the Battery

To charge your zūmo, connect it to a power source using the vehicle power cable or AC cable.

## Calibrating the Touch Screen

If the touch screen is not responding properly, calibrate the touch screen. Turn the unit off. Press and hold the **Power** button for about one minute until the Calibration screen appears. Follow the on-screen instructions.

## Using the Menu Page

- A** Displays satellite strength.
- B** Displays phone and headset connection status.
- C** Displays battery status.
- D** Touch to find a destination.
- E** Touch to view the map.
- F** Touch to open the Phone menu (when connected to a mobile phone with Bluetooth® wireless technology).
- G** Touch to view traffic incidents (requires antenna or receiver and subscription).



- H** Touch to view XM weather and radio tuner (requires antenna and subscription).
- I** Touch to open the Media Player.
- J** Touch to adjust the settings.

## Following Your Route

- 
- A screenshot of the zūmo navigation map. The map shows a route with a yellow line. Callouts point to various features: 'Touch to zoom the map in and out.' points to a zoom-in/out icon; 'Touch to open the Menu page.' points to a menu icon; 'Touch to open the Trip Information page.' points to a trip info icon; 'Touch to preview turns in the route.' points to a turn preview icon; 'Touch to save your current location.' points to a location save icon; 'Touch to open the Next Turn page.' points to a next turn icon. The map also shows 'Right on Keeler St', 'S KEELER ST', and 'S CHURCH ST'. At the bottom, there are speed (30 mph), arrival (9:02), and turn in (0.2) indicators.
- Touch to zoom the map in and out.**
  - Touch to open the Menu page.**
  - Touch to open the Trip Information page.**
  - Touch to preview turns in the route.**
  - Touch to save your current location.**
  - Touch to open the Next Turn page.**

## Using Traffic Features

Using an optional FM TMC traffic receiver or an XM smart antenna, you can receive traffic data on your zūmo. On the map, touch or to view details about a traffic delay on your current route. Touch **Avoid** to avoid the traffic delay. For more information about traffic and subscriptions, go to [www.garmin.com/traffic](http://www.garmin.com/traffic).

## Using the Fuel Gauge

1. On the Map page, touch **Speed** to open the Trip Information page.
2. Touch **Reset > Miles/Kilometers Per Tank**.
3. Enter amount, and touch **Done**.
4. A message appears when you have 30 miles (~48.3 km) remaining. Touch **OK**.
5. Touch to search for a nearby fuel station.
6. To reset, go to the Trip Information page, and touch the gauge > **Yes**.

## Locking Your zūmo

1. On the Menu page, touch > **System > Garmin Lock**.
2. Touch **OK**, and enter a four-digit PIN.
3. Re-enter your four-digit PIN.
4. Touch **OK**.
5. Drive to a security location, and touch **Set**.
6. Each time you turn on the zūmo, enter the four-digit PIN or drive to the security location.

## Using Hands-Free Features

Bluetooth wireless technology establishes a wireless link between devices, such as a mobile phone, wireless headset, and the zūmo.

### To pair using the zūmo settings:

1. Confirm that the device is compatible with your zūmo ([www.garmin.com/bluetooth](http://www.garmin.com/bluetooth)).
2. On the zūmo's Menu page, touch > **Bluetooth**.
3. Touch the **Add/Change** button next to **Connect Phone** or **Connect Headset**.
4. Enable your device's Bluetooth component, and enable Find Me/Discoverable/Visible mode. These settings might be in a Bluetooth or Connections menu.
5. Touch **OK** on the zūmo.
6. Select your device, and touch **OK**.
7. If necessary, enter the zūmo's Bluetooth PIN (**1234**) in your phone.
8. The next time you turn on your zūmo, it automatically tries to pair with the last device with which it was connected.